



HAND AUGER

Owner's Manual



Lazer™
Synthetic
Ultra-lite

Lazer™

Mora®



ATTENTION: PRIOR TO FIRST USE



It is recommended that everyone who uses this product read the StrikeMaster Hand Auger Owner's Manual.

CHECK BLADE SCREWS BEFORE AND AFTER EACH USE TO MAKE SURE THEY ARE TIGHT.

For best results exert firm pressure downward. **DO NOT ATTEMPT TO FORCE AUGER TO CUT.** If auger does not “Bite” on contact with the ice, check for dull or damaged blades.

STRIKEMASTER® Ice Augers

Ice Fishing has become one of the fastest growing and most popular winter sports, allowing the ardent angler the opportunity to enjoy their favorite outdoor activity.

StrikeMaster® Ice Augers are the finest ice cutting tools ever made for sport fishermen. With proper care and use these augers will give years of satisfactory service. The “SUPERIOR” cutting blades on StrikeMaster® augers are razor sharp and will operate until they become dull or damaged. If dull or not too severely damaged, the blades on the Mora hand augers can be hand honed to extend blade life. When this procedure no longer works, replacement blades can be purchased at www.strikemaster.com.

We know that you are anxious to go fishing and use your new hand ice auger, but before you go fishing, it is important and to your advantage to spend a few minutes getting acquainted with your new StrikeMaster® hand auger. There is no better way to acquaint yourself with the product than to read the Owner’s Manual and operating instructions. A few minutes spent studying this manual before your first ice fishing outing will be time well spent.


Check-mark the model type and record the purchase date in the space below. Also, please return the enclosed WARRANTY CARD or submit your information at www.strikemaster.com to validate your limited warranty.

Model: ☐ Lazer™ Synthetic Ultra-Lite ☐ Lazer™ ☐ Mora®

Date Purchased ____ / ____ / ____

⚠ ATTENTION ⚠

⚠ THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND ANY PROVIDED WITH OR ON THE EQUIPMENT ON WHICH THIS ENGINE IS USED BEFORE ATTEMPTING TO OPERATE YOUR STRIKEMASTER® ICE AUGER.

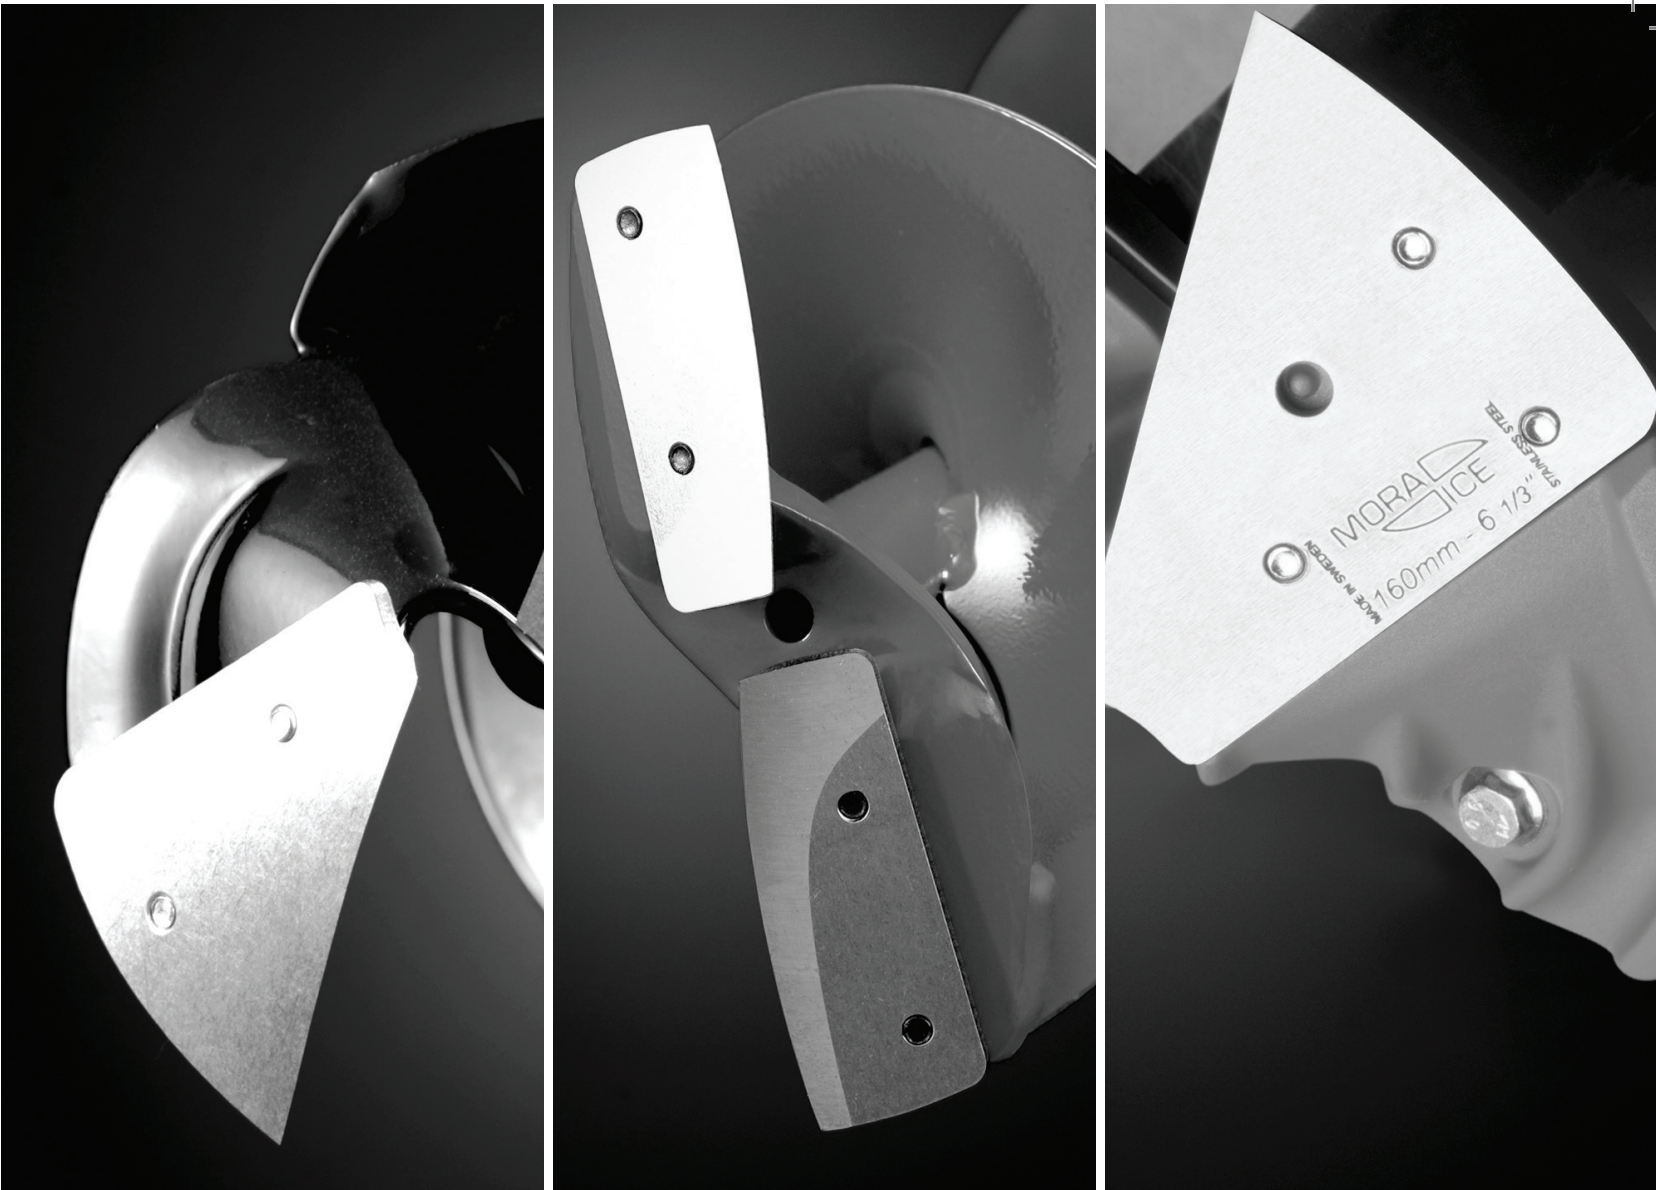

⚠ IMPORTANT SAFEGUARDS ⚠

It is recommended that everyone who uses this product should read this StrikeMaster Owner’s Manual before operating.

1. The cutting blades on the ice augers are razor sharp. Use extreme care when handling.
2. Use caution when removing or replacing blade guard.
3. Use caution when replacing auger blades.
4. Always keep blade guard on auger except when in use.
5. The use of this auger by children is not recommended.
6. After use, the auger blades should be wiped dry and oiled to extend auger life.
7. The manufacturer recommends that all StrikeMaster® hand augers be used for ice cutting only.
8. CHECK BLADE SCREWS BEFORE AND AFTER EACH USE TO MAKE SURE THEY ARE TIGHT.

⚠ OPERATION ⚠

Best results can be obtained by exerting firm pressure downward. The auger is designed to “Shave” the ice, therefore minimum force should be required to operate providing the blades are sharp and in good condition. When cutting old holes use light pressure on the auger to prevent excess drag. Should some difficulty be encountered, try tipping the auger a few degrees to one side to change the angle of attack. Cutting can be made easier by penetrating just a few inches and then cleaning the hole of chips before cutting further.

DO NOT ATTEMPT TO FORCE AUGER TO CUT
If auger does not “Bite” on contact with the ice, check for dull or damaged blades.





LIMITED WARRANTY

The warrantor's obligation shall be limited to repairing or replacing any part, which upon examination by StrikeMaster, is determined to be defective. This obligation begins on the date of purchase (as evidenced by a product receipt) and continues for a period of ONE YEAR after purchase ("warranty period"), with the exception of engines and parts subject to wear and tear. Customer is responsible for shipping and transportation charges to the nearest warranty repair center.

Company warrants that Product, other than engines and parts subject to wear and tear, will perform substantially in accordance with the accompanying written materials [owner's manual] for a period of ONE YEAR. In the case of Honda and Solo engines, the warranty period continues for a period of TWO YEARS after purchase. Parts subject to normal wear and tear are not covered by warranty including: air filter, fuel filter, any rubber part that comes in contact with fuel, clutch, spark plug, starter (recoil), and blades. In the event applicable law imposes any implied warranties, the implied warranty period is limited to ONE YEAR from the date reflected on the product receipt. Some jurisdictions do not allow such limitations on the duration of an implied warranty, so the above limitation may not apply.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY AND AUTHORIZED SERVICE CENTERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WITH REGARD TO THE PRODUCT AND WRITTEN MATERIALS [OWNER'S MANUAL]. THIS LIMITED WARRANTY GIVES CUSTOMER SPECIFIC LEGAL RIGHTS. CUSTOMER MAY HAVE OTHER RIGHTS DEPENDING ON THE JURISDICTION.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY OR AUTHORIZED SERVICE CENTER BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING WITHOUT LIMITATION, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL OR INDIRECT DAMAGES FOR PERSONAL INJURY, LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, THE COMPANY'S AND AUTHORIZED REPAIR CENTER'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Continued satisfying performance from your StrikeMaster power ice auger may be assured by applying a minimum amount of preventive maintenance.

WARRANTY SERVICE

Visit our website for up to date warranty service and non warranty repair service centers.

www.strikemaster.com